Android screen "USB developer tool" burning instructions

* If the computer used for burning is burning for the first time, driver installation required.

(Please refer to the "USB Driver Installation Instructions" under the USB driver directory)

1, Preparation

*USB burning tool software:AndroidTool

6		Address	Name	Path	
		0x00000000	Loader	Z:\Dwin\D8801\rockdev\Image=rk3288\	
	~	0x00000000	Parameter	Z:\Dwin\D8801\rockdev\Image~rk3288\	
	~	0x00002000	uboot	Z:\Dwin\D8801\rockdev\Image~rk3288\	
	~	0x00004000	trust	Z:\Dwin\D8801\rockdev\Image~rk3288\	
	~	0x00006000	Misc	Z:\Dwin\D8801\rockdev\Image~rk3288\	
	~	0x00008000	Resource	Z:\Dwin\D8801\kernel\resource.img	
	▼	0x00010000	Kernel	Z:\Dwin\D8801\kernel\kernel.img	
	~	0x00020000	Boot	Z:\Dwin\D8801\rockdev\Image=rk3288\	
	~	0x00030000	Recovery	Z:\Dwin\D8801\rockdev\Image=rk3288\	
0	~	0x0018A000	System	Z:\Dwin\D8801\rockdev\Image=rk3288\	
1	~	0x00592000	vendor	Z:\Dwin\D8801\rockdev\Image=rk3288\	
2	~	0x00612000	oem	Z:\Dwin\D8801\rockdev\Image=rk3288\	
oad	er:		Run	Switch Dev Partition Cle	ar

*Upgrade firmware (shared with SD card burning)



2, USB burning operation

*Open the Android Tool tool and click on the "upgrade firmware" above to enter the following interface

RKDevTool v2	.54						
ownload Image	Upgrade Fi	rmware Ad	vanced Function				
Firmware	Upgrade	Switch	EraseFlash				
Fw Ver:		Loader	Ver:	Chip Info:			
Firmware:							
r mining of o.							

*Click Firmware to select the img file to burn

$\rightarrow \cdot \uparrow$			مام بيشم مي	un a Andrai	dTool > rockdev >	T/#0506	~	ō	+da adm + D	固件0506"	
→ v T	« KO	ckenip > KKTO	ois > windov	vs > Android	aroor > rockdev > r		~	0	技会	el1+0200	
」织▼ 新建	文件夹										
桌面	* ^	名称	~		修改日期	类型		大小			
🕹 下载	*	💼 update.img	1		2021/5/6 10:30	好压 IMG E	缩文件	1,70	0,031		
🔮 文档	*										
📰 图片	1										
📃 此电脑	1										
AndroidTo	ool_R										
Download											
rk3288											
USB开发者	烧灵										
OneDrive											
此电脑											
🧊 3D 对象											
DMG1280	0T07										
📑 视频											
■ 图片											
🔮 文档											
➡ 下载											
▶ 音乐											
重 桌面											
🏪 本地磁盘 (C:)										
🕳 本地磁盘(D:)										
	文件名	i(N): update.img	1					~	Firmv	vare(*.img),Lo	ader(*.b
			<u> </u>						-	开(0)	取消

wnload Image	Upgrade Fi	rmware Adv	vanced Function					
Firmware	Upgrade	Switch	EraseFlash					
Fw Ver:	7.1.00	Loader	Ver: 2.58	Chip Info:	RK32			
Firmware:	C:\Users\	Administrat	tor\Desktop\Rock(hip\RKTools\w	indows\Androi			
				•				

Steps:

---Power Off ---Press the "Recover" key on the Android screen ---connect Android screen to the PC with a USB cable ---connect the Android screen to DC-12V power supply

When The following interface appears, click "Upgrade" to start burning.

ownload Image	Upgrade Firmwa	re Adv	anced Function					_
Firmware	Upgrade S	witch	EraseFlash					
Fw Ver:	7.1.00	.oader \	Ver: 2.58	Chip Info:	RK32			
Firmware:	C:\Users\Admi	nistrat	or\Desktop\RockCl	hip\RKTools\wi	ndows\Androi			
	L							

After the burning is completed, the device will automatically restart, burning ended.